


Rear Deltoid/Pectoral Fly

OWNER'S MANUAL

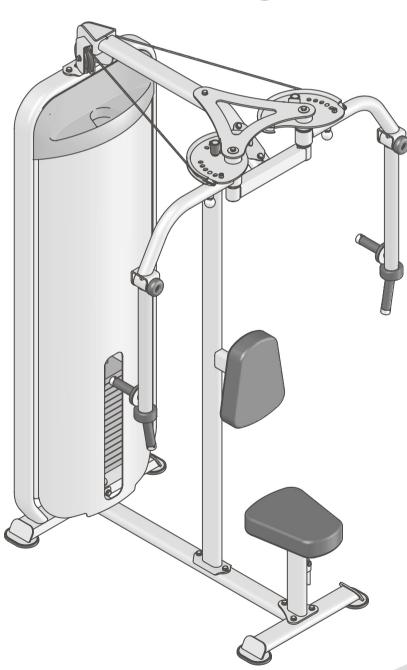

! CAUTION

Read all precautions and instructions in this manual before using this equipment

! CAUTION

Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

Important Safety Instructions	3
Instructions	4
Parts List	. 5
Exploded View	6
Measurement Guide	7
Assembly Instructions	8
Assembly	9
Exercise Instructions 1	15
Specifications 1	15
Maintenance Schedule 1	16
General Maintenance Information 1	17
Weight Training Tips 1	18

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- * Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
- * Do not allow children on or near the equipment.
- * Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- * Wear proper exercise clothing and shoes for your workout----no loose clothing.
- * Be careful when getting on or off the equipment.
- * Do not overexert yourself or work to exhaustion.
- * If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- * Never operate the unit when it has been dropped or damaged.
- * Never drop or insert anything into any opening in the equipment.
- * Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- * Frayed or worn cables can be dangerous and may cause injury.

 Periodically check these cables for any indication of wear.
- * Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- * Do not attempt to lift more weight than you can control safely.
- * Do not use the equipment outdoors.

Personal Safety During Assembly


- * Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- * Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

Tools Required

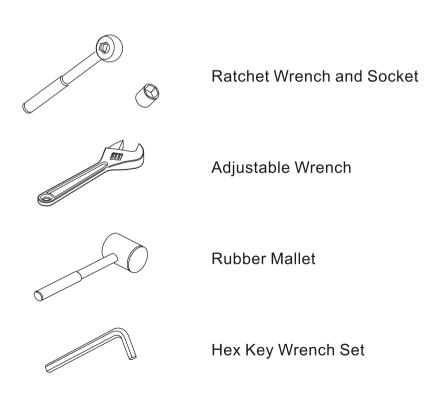


Parts List


NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

1 Weight Stack Frame	Item No.	Description	Qty	Item No.	Description	Qty	
3 Adjustable Cross Brace 2 39 Rubber Bumper 2 4 Left Rotary Arm 1 40 T- Bearing 8 5 Right Rotary Arm 1 41 Top Front Shroud 1 6 Bottom Cross Brace 1 42 Top Rear Shroud 1 7 Seat Pad Frame 1 43 Bottom Front Shroud 1 8 Telescopic Frame 1 44 Bottom Rear Shroud 1 9 Right Cam 1 45 Foot Pad 4 10 Left Cam 1 46 Weight Rubber Bumper 2 11 Upright Frame 1 47 Top Plate 1 12 Seat Pad 2 48 Washer Φ11*Φ20*2 33 13 Pop Pin 2 49 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ3*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 2 54 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*105 2 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*25 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Serew 10-32*3.2 8 25 Hand Cushion 2 61 Hex Pladed Cap Screw M8*25 4 26 Grip 2 63 Socket Head Cap Screw M8*20 4 27 Grip 2 63 Socket Head Cap Screw M8*20 4 28 Grip 2 66 Hex Flanged Nut 1/2"-13 1 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plusting Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	1	Weight Stack Frame	1	37	Spring	1	
4 Left Rotary Arm 1 40 T-Bearing 8 5 Right Rotary Arm 1 41 Top Front Shroud 1 6 Bottom Cross Brace 1 42 Top Rear Shroud 1 7 Seat Pad Frame 1 43 Bottom Front Shroud 1 8 Telescopic Frame 1 44 Bottom Rear Shroud 1 9 Right Cam 1 45 Foot Pad 1 10 Left Cam 1 46 Weight Rubber Bumper 2 11 Upright Frame 1 47 Top Plate 1 11 Upright Frame 1 47 Top Plate 1 12 Seat Pad 2 48 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ9*Φ16*1.6	2	Top Cross Brace	1	38	Adjustable Support Sleeve		
5 Right Rotary Arm 1 41 Top Front Shroud 1 6 Bottom Cross Brace 1 42 Top Rear Shroud 1 7 Seat Pad Frame 1 43 Bottom Front Shroud 1 8 Telescopic Frame 1 44 Bottom Rear Shroud 1 9 Right Cam 1 45 Foot Pad 4 10 Left Cam 1 46 Weight Rubber Bumper 2 11 Upright Frame 1 47 Top Plate 1 11 Seat Pad 2 48 Washer Φ9*Φ16*1.6 6 12 Seat Pad 2 49 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ9*Φ16*16*1.6 6 15 Adjustable Support	3	Adjustable Cross Brace	2	39	Rubber Bumper		
6 Bottom Cross Brace 1 42 Top Rear Shroud 1 7 Seat Pad Frame 1 43 Bottom Front Shroud 1 8 Telescopic Frame 1 44 Bottom Rear Shroud 1 9 Right Cam 1 45 Foot Pad 4 10 Left Cam 1 46 Weight Rubber Bumper 2 11 Upright Frame 1 47 Top Plate 1 12 Seat Pad 2 48 Washer Φ11*Φ20*2 33 13 Pop Pin 2 49 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ38*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*55 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 5 21 Guide Rod 1 57 Hex Head Bolt M10*65 5 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*55 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M10*10 2 28 Grip 2 63 Socket Head Cap Screw M10*10 2 29 Grip 2 63 Socket Head Cap Screw M10*10 2 20 Guide Rubber Supporr 2 66 Button Head Cap Screw M10*10 2 28 Grip 2 63 Socket Head Cap Screw M10*10 2 29 Grip 2 63 Socket Head Cap Screw M10*10 2 20 Guide Rubber Stopper 2 66 Button Head Cap Screw M10*10 2 20 Grip 2 63 Socket Head Cap Screw M10*10 2 20 Grip 2 64 Socket Head Cap Screw M10*10 2 21 Guide Rubber Stopper 2 66 Button Head Cap Screw M10*10 2 22 Guide Rubber Stopper 3 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1	4	Left Rotary Arm	1	40	T- Bearing		
7 Seat Pad Frame 1 43 Bottom Front Shroud 1 8 Telescopic Frame 1 44 Bottom Rear Shroud 1 9 Right Cam 1 45 Foot Pad 4 10 Left Cam 1 46 Weight Rubber Bumper 2 11 Upright Frame 1 47 Top Plate 1 12 Seat Pad 2 48 Washer Φ11*Φ20*2 33 13 Pop Pin 2 49 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ3*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5° Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5° Pulley 1 55 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 </td <td>5</td> <td>Right Rotary Arm</td> <td>1</td> <td>41</td> <td colspan="3">Top Front Shroud</td>	5	Right Rotary Arm	1	41	Top Front Shroud		
8 Telescopic Frame 1 44 Bottom Rear Shroud 1 9 Right Cam 1 45 Foot Pad 4 10 Left Cam 1 46 Weight Rubber Bumper 2 11 Upright Frame 1 47 Top Plate 1 12 Seat Pad 2 48 Washer Φ11*Φ20*2 33 13 Pop Pin 2 49 Washer Φ38*Φ11*1.5 2 14 Top Frame 1 50 Washer Φ38*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 18 4.5" Pulley 1 55 Hex Head Bolt M10*10*5 2 20 Selector Pin W/Coil 1 5	6	Bottom Cross Brace	1	42	Top Rear Shroud	1	
9 Right Cam 1 45 Foot Pad 4 10 Left Cam 1 46 Weight Rubber Bumper 2 11 Upright Frame 1 47 Top Plate 1 1 12 Seat Pad 2 48 Washer Φ11*Φ20*2 33 13 Pop Pin 2 49 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ38*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 10 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 2 12 Guide Rod 1 57 Hex Head Bolt M10*105 2 2 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 Big Bumper 2 60 Socket Set Screw 10-32*3.2 2 8 Grip 2 61 Pan Head Phillips Screw M5*15 8 Grip 2 63 Socket Head Cap Screw M10*10 2 8 Grip 2 64 Socket Head Cap Screw M10*10 2 9 Pulley separate cap 2 65 Button Head Cap Screw M10*10 2 10 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 3 Rubber Limited 4 67 Nylon lock Nut M10 3 Plastic Tube Guide 3 Check Set Screw 10-32 Screw M10*110 3 Plastic Tube Guide 3 Pivot Axle 3 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 Socket Fland Cap 1 For Pan Head Polle Nut 4 Sushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 Lubbe	7	Seat Pad Frame	1	43	Bottom Front Shroud		
10 Left Cam 1	8	Telescopic Frame	1	44	Bottom Rear Shroud	1	
11 Upright Frame 1	9	Right Cam	1	45	Foot Pad	4	
12 Seat Pad 2 48 Washer Φ11*Φ20*2 33 13 Pop Pin 2 49 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ38*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*105 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*25 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 <td>10</td> <td>Left Cam</td> <td>1</td> <td>46</td> <td>Weight Rubber Bumper</td> <td>2</td>	10	Left Cam	1	46	Weight Rubber Bumper	2	
13 Pop Pin 2 49 Washer Φ9*Φ16*1.6 6 14 Top Frame 1 50 Washer Φ38*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*25 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24	11	Upright Frame	1	47	Top Plate	1	
14 Top Frame 1 50 Washer Φ38*Φ11*1.5 2 15 Adjustable Support 1 51 Hex Head Bolt M10*25 7 16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M10*10 2 28 Grip 2 63 Socket Head Cap Screw M10*10 2 29 Pulley separate cap 2 65 Button Head Cap Screw M10*10 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	12	Seat Pad	2	48	Washer Φ11*Φ20*2	33	
15 Adjustable Support 16 Pulley Bracket 17 Weight Stack Base 28 53 Hex Head Bolt M10*30 49 4.5" Pulley 29 54 Hex Head Bolt M10*50 10 3.5" Pulley 10 Selector Pin W/Coil 11 55 Hex Head Bolt M10*55 12 Guide Rod 11 57 Hex Head Bolt M10*65 12 Guide Rubber Bumper 13 Adjustable Plate 14 58 Button Head Cap Screw M8*55 15 Hand Cushion 16 Cable 17 Grip 18 Grip 19 Grip 10 Grip 10 Grip 10 Grip 11 Grip 12 Grip 13 Grip 14 Grip 15 Grip 16 Grip 17 Grip 18 Grip 19 Grip 19 Grip 19 Grip 19 Grip 10 Grip 10 Grip 10 Grip 11 Grip 12 Grip 13 Grip 14 Grip 15 Grip 16 Grip 17 Grip 18 Hex Head Bolt M10*50 19 Hex Head Bolt M10*50 10 Grip 10 Grip 11 Grip 12 Grip 13 Grip 14 Grip 15 Grip 16 Grip 17 Grip 18 Grip 19 Grip 19 Grip 19 Grip 10 Grip 10 Grip 10 Grip 10 Grip 10 Grip 11 Grip 12 Grip 12 Grip 13 Grip 14 Grip 15 Grip 16 Grip 17 Grip 18 Grip 18 Grip 19 Grip 19 Grip 10 Grip 11 Grip 11 Grip 12 Grip 12 Grip 13 Grip 14 Grip 15 Grip 16 Grip 17 Grip 18 Grip 18 Grip 19 Grip 10 G	13	Pop Pin	2	49	Washer Ф9*Ф16*1.6		
16 Pulley Bracket 1 52 Hex Head Bolt M10*30 4 17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M10*10 2	14	Top Frame	1	50	Washer Ф38*Ф11*1.5	2	
17 Weight Stack Base 2 53 Hex Head Bolt M10*50 1 18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M10*10 2 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	15	Adjustable Support	1	51	Hex Head Bolt M10*25	7	
18 4.5" Pulley 2 54 Hex Head Bolt M10*50 2 19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 <t< td=""><td>16</td><td>Pulley Bracket</td><td>1</td><td>52</td><td colspan="2">Hex Head Bolt M10*30</td></t<>	16	Pulley Bracket	1	52	Hex Head Bolt M10*30		
19 3.5" Pulley 1 55 Hex Head Bolt M10*55 2 20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M10*10 2 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	17	Weight Stack Base	2	53	Hex Head Bolt M10*50		
20 Selector Pin W/Coil 1 56 Hex Head Bolt M10*65 5 21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut	18	4.5" Pulley	2	54	Hex Head Bolt M10*50		
21 Guide Rod 1 57 Hex Head Bolt M10*105 2 22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut <t< td=""><td>19</td><td>3.5" Pulley</td><td>1</td><td>55</td><td colspan="2">Hex Head Bolt M10*55</td></t<>	19	3.5" Pulley	1	55	Hex Head Bolt M10*55		
22 Guide Rubber Bumper 4 58 Button Head Cap Screw M8*55 1 23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 <	20	Selector Pin W/Coil	1	56	Hex Head Bolt M10*65		
23 Adjustable Plate 2 59 Socket Head Cap Screw M8*25 1 24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1 <td>21</td> <td>Guide Rod</td> <td>1</td> <td>57</td> <td>Hex Head Bolt M10*105</td> <td>2</td>	21	Guide Rod	1	57	Hex Head Bolt M10*105	2	
24 Big Bumper 2 60 Socket Set Screw 10-32*3.2 8 25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	22	Guide Rubber Bumper	4	58	Button Head Cap Screw M8*55	1	
25 Hand Cushion 2 61 Pan Head Phillips Screw M4*15 2 26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	23	Adjustable Plate	2	59	Socket Head Cap Screw M8*25	1	
26 Cable 1 62 Pan Head Phillips Screw M5*15 8 27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	24	Big Bumper	2	60	Socket Set Screw 10-32*3.2	8	
27 Grip 2 63 Socket Head Cap Screw M10*10 2 28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	25	Hand Cushion	2	61	Pan Head Phillips Screw M4*15	2	
28 Grip 2 64 Socket Head Cap Screw M8*20 4 29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	26	Cable	1	62	Pan Head Phillips Screw M5*15	8	
29 Pulley separate cap 2 65 Button Head Cap Screw M10*110 2 30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	27	Grip	2	63	Socket Head Cap Screw M10*10	2	
30 Rubber Stopper 2 66 Hex Flanged Nut 1/2"-13 1 31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	28	Grip	2	64	Socket Head Cap Screw M8*20	4	
31 Rubber Limited 4 67 Nylon lock Nut M10 12 32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	29	Pulley separate cap	2	65	Button Head Cap Screw M10*110	2	
32 Plastic Tube Guide 1 68 Nylon lock Nut M8 5 33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	30	Rubber Stopper	2	66	Hex Flanged Nut 1/2"-13	1	
33 Pivot Axle 2 69 U-Style Tapped Hole Nut 4 34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	31	Rubber Limited	4	67	Nylon lock Nut M10	12	
34 Bushing Φ38*Φ25.4*18 4 70 Hex key S=6 1 35 Φ25.4 End Cap 4 71 Lube 1	32	Plastic Tube Guide	1	68	Nylon lock Nut M8	5	
35 Φ25.4 End Cap 4 71 Lube 1	33	Pivot Axle	2	69	U-Style Tapped Hole Nut	4	
·	34	Bushing Ф38*Ф25.4*18	4	70	Hex key S=6	1	
36 Oval Fixed Plate 130 1	35	Ф25.4 End Cap	4	71	Lube	1	
	36	Oval Fixed Plate 130	1				

[!] There are two configuration of weights: 250LBS(sixteen 15LBS Weight Plate) and 170LBS(sixteen 10LBS Weight Plate), please see following form for details.

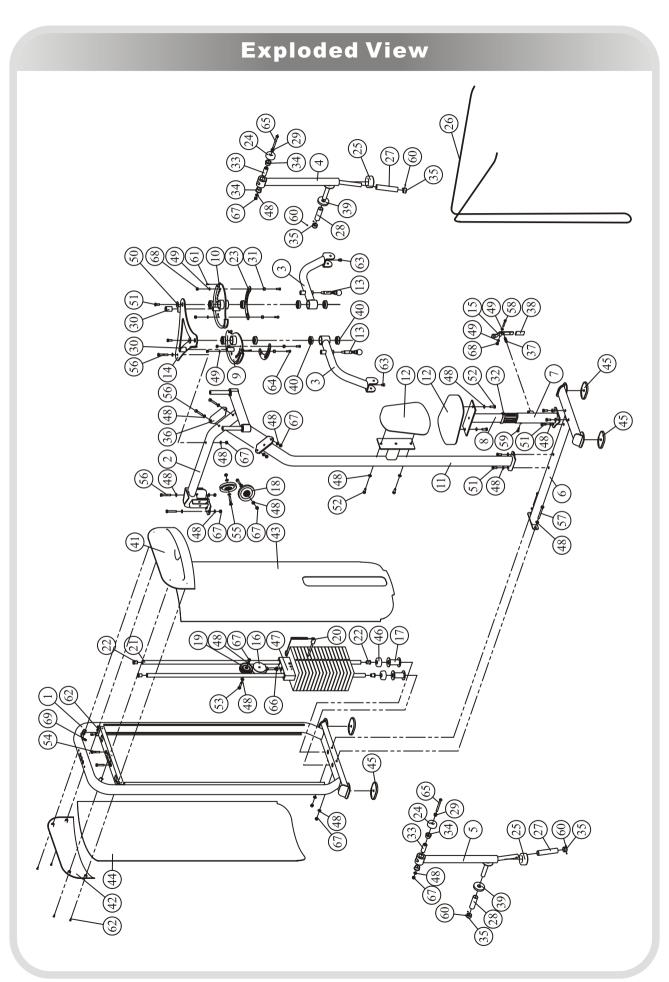

Measurement Guide

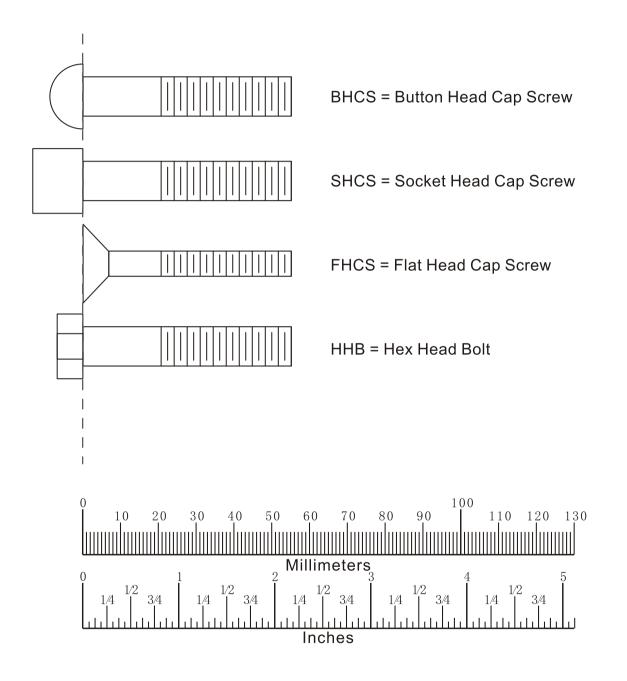

Assembly Instructions


Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.



Note

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

- 1. Attach the Bottom Cross Brace (6#) to the Weight Stack Frame (1#) using: two M10*105 HHB (57#) four Φ11*Φ20*2 Washer (48#) two M10 Nylon lock Nut (67#)
- 2. Attach the Upright Frame (11#) to the Bottom Cross Brace (6#) using: two M10*25 HHB (51#) two Φ11*Φ20*2 Washer (48#)
- 3. Attach the Top Cross Brace (2#) to the Upright Frame (11#) using: two M10*65 HHB (56#) four Φ11*Φ20*2 Washer (48#) two M10 Nylon lock Nut (67#) one Oval Fixed Plate 130 (36#)
- 4. Attach the Top Cross Brace (2#) to the Weight Stack Frame (1#) using: two M10*65 HHB (56#) four Φ11*Φ20*2 Washer (48#) two M10 Nylon lock Nut (67#)
- 5. Attach the Seat Pad Frame (7#) to the Bottom Cross Brace (6#) using: three M10*25 HHB (51#) three Φ11*Φ20*2 Washer (48#)

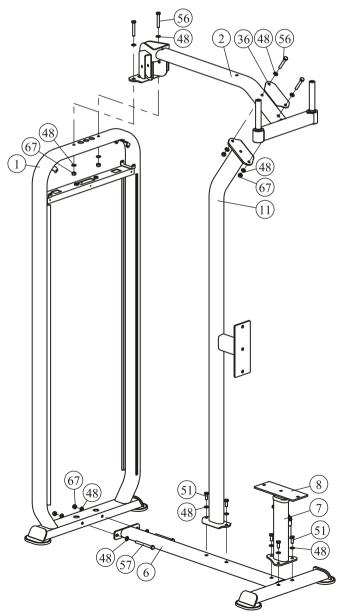

Step 2

1. Attach two Adjustable Cross Brace (3#), the Right Cam (9#), the Left Cam (10#) to the Weight Stack Frame (1#), attach the Top Frame (14#) to the Top Cross Brace (2#) using:

two M10*25 HHB (51#) two Φ38*Φ11*1.5 Washer (50#) one M10*65 HHB (56#) one Φ11*Φ20*2 Washer (48#)

2. Attach the Left Rotary Arm (4#) to the Adjustable Cross Brace (3#) using: one M10*110 BHCS (65#) one Φ20*Φ10.5*14 Pulley separate cap (29#)


one Big Bumper (24#) one Φ11*Φ20*2 Washer (48#)

one M10 Nylon lock Nut (67#)

3. Attach the Right Rotary Arm (5#) to the Adjustable Cross Brace (3#) using: one M10*110 BHCS (65#) one Φ20*Φ10.5*14 Pulley separate cap (29#)

one Big Bumper (24#) one Φ11*Φ20*2 Washer (48#)

one M10 Nylon lock Nut (67#)

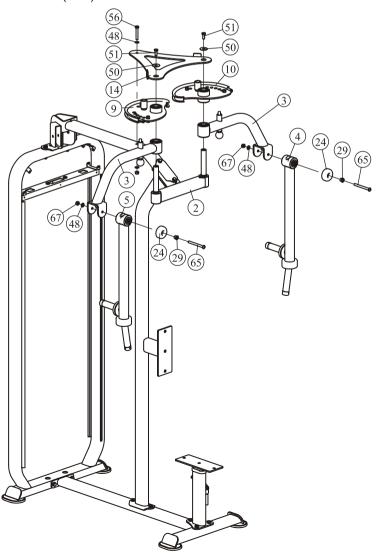

Step 3

Attach the following Parts:


two Guide Rod (21#) two Weight Rubber Bumper (46#) one Top Plate (47#) two Weight Stack Base (17#)

sixteen Weight Plate


to the Weight Stack Frame (1#) using:

two M10*50 HHB (54#) two Φ11*Φ20*2 Washer (48#)


! There are two configuration of weights: 250LBS(sixteen 15LBS Weight Plate) and 170LBS(sixteen 10LBS Weight Plate), please see following form for details.

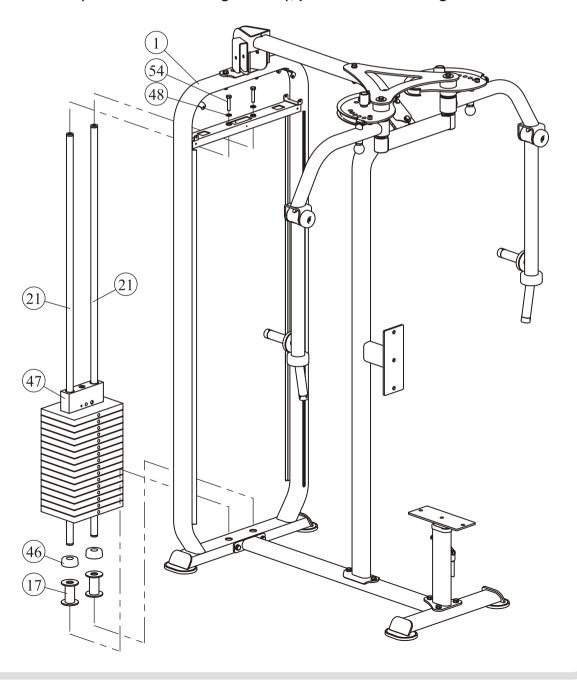


- 1. Attach two 4.5" Pulley (18#) to the Top Cross Brace (2#) using: two M10*55 HHB (55#) fourΦ11*Φ20*2 washer (48#) two M10 Nylon lock Nut (67#)
- 2. Attach the Pulley Bracket (16#) to the Top Plate (47#) using: one Hex Flanged Nut 1/2"-13 (66#)
- 3. Attach the 3.5" Pulley (19#) to the Pulley Bracket (16#) using: one M10*50 HHB (53#) two Φ11*Φ20*2 washer (48#) one M10 Nylon lock Nut (67#)
- 4. Attach the Cable (26#) to the Right Cam (9#) and Left Cam (10#) using: two M4*15 Pan Head Phillips Screw (61#)

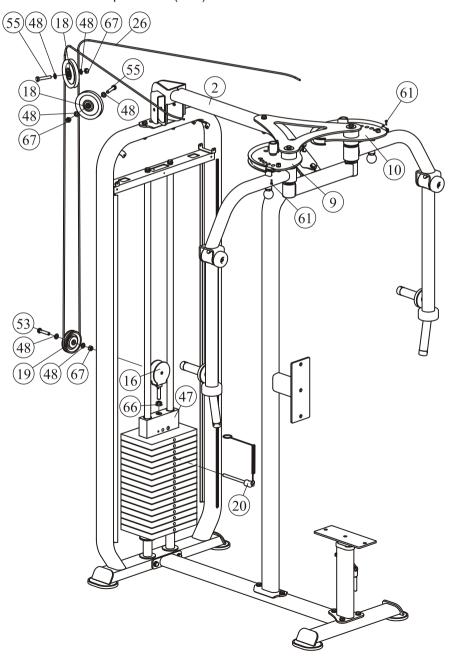


- 1. Attach the Bottom Front Shroud (43#) to the Weight Stack Frame (1#).
- 2. Attach the Bottom Rear Shroud (44#) to the Weight Stack Frame (1#).
- 3. Attach the Top Front Shroud (41#) to the Weight Stack Frame (1#) using: four M5*15 Pan Head Phillips Screw (62#)
- 4. Attach the Top Rear Shroud (42#) to the Weight Stack Frame (1#) using: four M5*15 Pan Head Phillips Screw (62#) four M5 U-Style Tapped Hole Nut (69#)

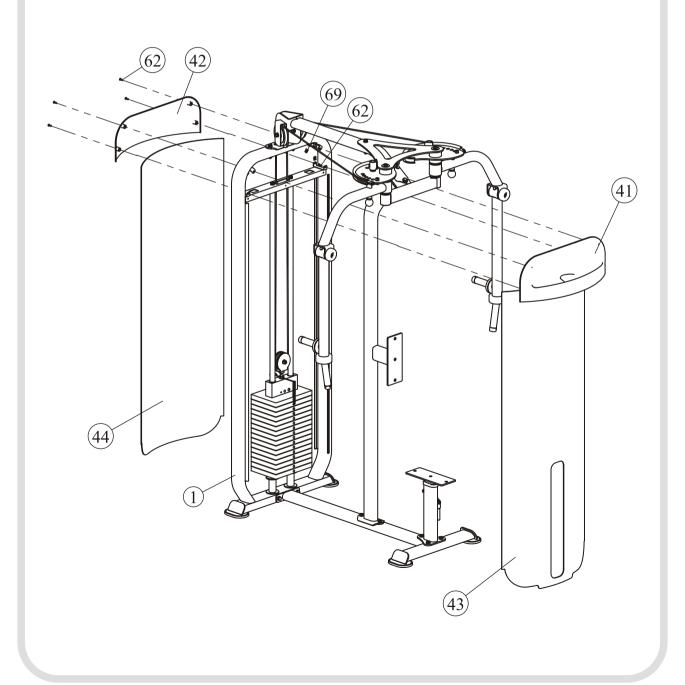

- 1. Attach the Seat Pad (12#) to the Upright Frame (11#) using: two M10*30 HHB (52#) two Φ11*Φ20*2 washer (48#)
- 2. Attach the Seat Pad (12#) to the Telescopic Frame (8#) using: two M10*30 HHB (52#) two Φ11*Φ20*2 washer (48#)

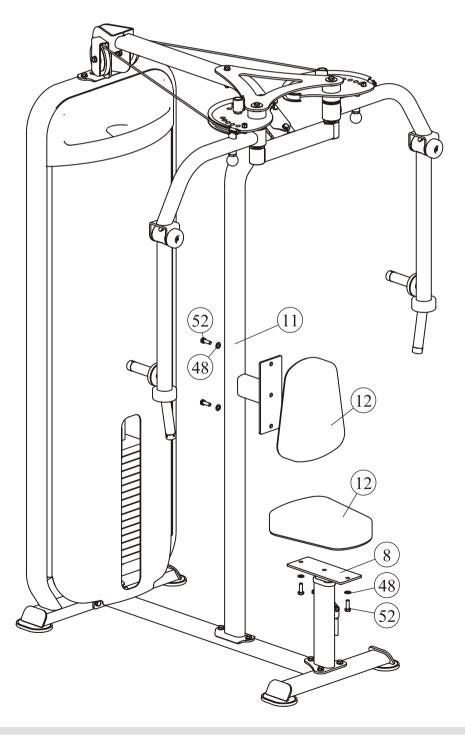

Exercise Instructions

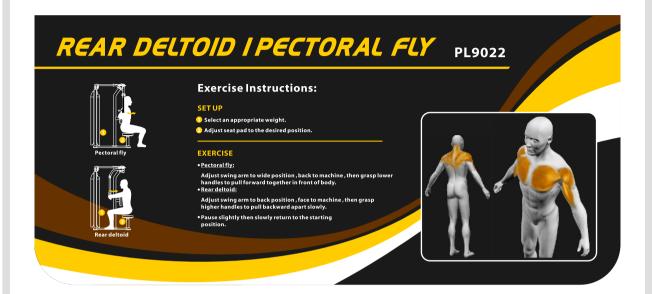

SET UP

- 1 Select an appropriate weight.
- 2 Adjust seat pad to the desired position.

EXERCISE

Pectoral fly:

Adjust swing arm to wide position, back to machine, then grasp lower handles to pull forward together in front of body.

• Rear deltoid:

Adjust swing arm to back position, face to machine, then grasp higher handles to pull backward apart slowly.

 Pause slightly then slowly return to the starting position.

(Adjust weight according to the select pin)

Specifications

Class: S

Maximum Wt. Capacity: 113Kg/ 250lbs. Maximum Load of Trainer: 150Kg/ 330lbs.

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or warn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *We uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight.

Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







