

RL8103

BICEPS CURL/TRCEPS EXTENSION OWNER'S MANUAL

19Q -

CAUTION! Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

CAUTION!

Read all precautions and instructions in this manual before using this equipment.

Important Safety Instructions	3
Instructions	5
Exploded View and Parts List	6
Measurement Guide	11
Assembly Instructions	12
Assembly	13
Adjust Instructions	
Maintenance Schedule	
General Maintenance Information	18
Weight Training Tips	

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:


- 1. Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
- Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- The product should only be used on a level surface and is with 0.5 meters space around the product. Do not use the equipment outdoors.
- Do not allow children on or near the equipment. And children are not allowed to use this equipment. Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged. Never drop or insert anything into any opening in the equipment. Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition. Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.

Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

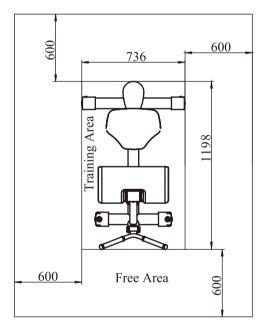

Training Area and Free Area


Specifications

Class: S Maximum User Weight: 150kg/ 330lbs Product Total Surface: 736*1198mm Product Total Mass:

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.


The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

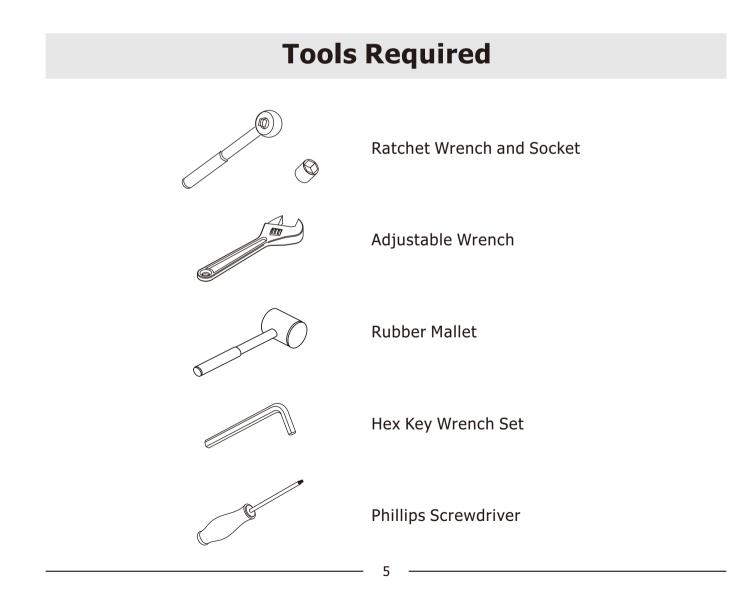


Overall

Item No	Grade No.	Part No.	Description	QTY
1	1	RL810301ASSY	Upright Frame ASSY	1
2	2	RL810302ASSY	Seat Frame ASSY	1
3	3	RL810303ASSY	Swing Frame ASSY	1
4	4	RL810304ASSY	Handle Frame ASSY	1
5	5	RL81030500	ShaftФ25.4*77	1
6	6	RL81030600	ShaftФ25*110	1
7	7	RL81013100	Decorative Sleeve	1
8	8	RL81014000	Cup Holder	1
9	9	ST56-390SASSY	Hydro-Cylinder ASSY	1
10	10	RL81035100	Arm Pad	1
11	11	RL81015100	Seat Pad	1
12	12	RL81052300	Locking Ring 045*026*R32.5	1
13	13	IT80011800DS	Adjustable Ring Φ30*2*3	1
14	14	IN-D21202000	Ф38*10.5 Aluminium Cap	2
15	15	RL81052200	Φ72*11.6 Aluminium Cap	2
16	16	GB845ST4.2*16N19	Screw ST4.2*16	4
17	17	NM10DN2	Nylon Lock Nut M10	2
18	18	GB9310N19	Spring Washer Φ10	4
19	19	GB9510DN2	Flat Washer Φ11*Φ20*2	10
20	20	PNLM10*40N19	Button Head Cap Screw M10*40	2
21	21	GB70BTM10*30DN18	Socket Head Cap Screw M10*30	10
22	22	GB70BTM10*20DN18	Socket Head Cap Screw M10*20	1
23	23	CNLM10*30*30DN20	Flat Head Cap Screw M10*30	4
24	24	NBS6DS	Hex Key S=6	1
25	25	LW200BS	Wrench	1

Overall

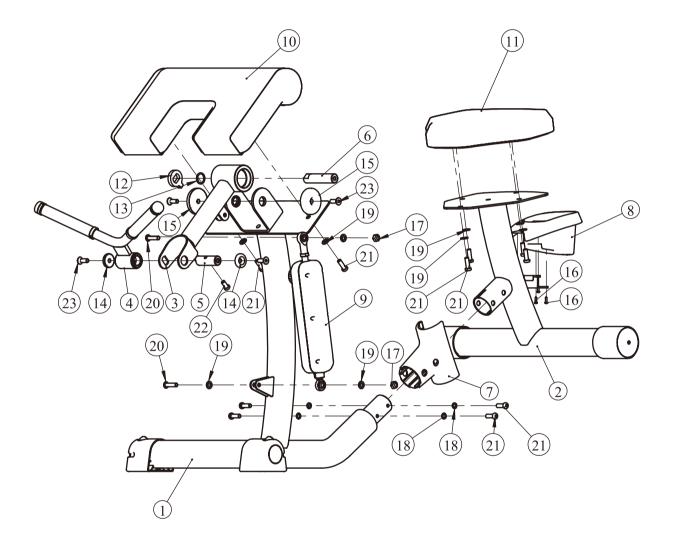

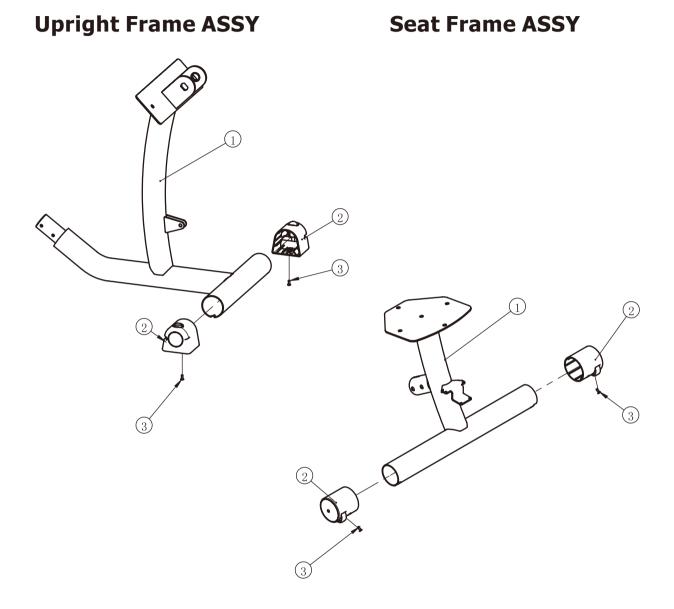


ItemNo.	Grade No.	Part No.	Description	QTY
1	1.1	RL81030100	Upright Frame	1
2	1.2	B4002200	Rear End Cap	2
3	1.3	GB819M5*15N19	Flat Head Cap Screw M5*15	2

ItemNo.	Grade No.	Part No.	Description	QTY
1	2.1	RL81030200	Seat Frame	1
2	2.2	B4001600	Endcap with Wheel	2
3	2.3	GB819M5*15N19	Flat Head Cap Screw M5*15	2

Swing Frame ASSY


Handle Frame ASSY

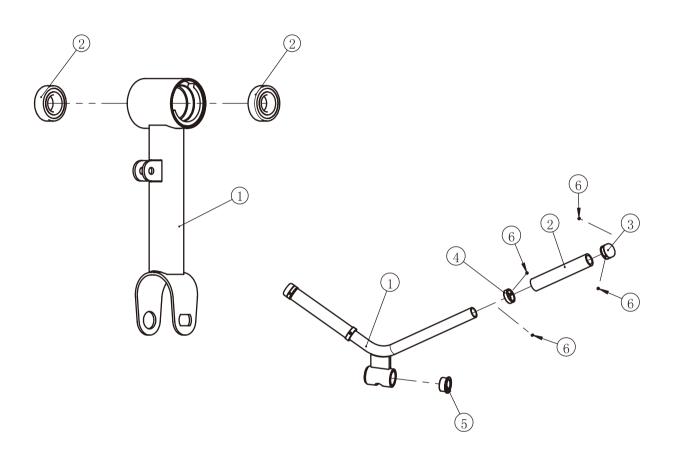

ItemNo.	Grade No.	Part No.	Description	QTY
1	3.1	RL81030300	Swing Frame	1
2	3.2	GB2766205-2ZC3	Deep Groove Ball Bearing Φ25*Φ52*15	2


ItemNo.	Grade No.	Part No.	Description	QTY
1	4.1	RL81030400	Handle Frame	1
2	4.2	026-01PL0206-14	Grip STФ30*Ф22*160	2
3	4.3	CWRVL0051800	Φ25 Aluminium Grip Cap	2
4	4.4	V39500	Φ25.4 Aluminium Grip Ring	2
5	4.5	M02502000	Bushing Φ38*Φ25.4*18	2
6	4.6	YZGB7710-32*3.2N19	Socket Set Screw 10-32UNF*3.2	8

Hydro-Cylinder ASSY

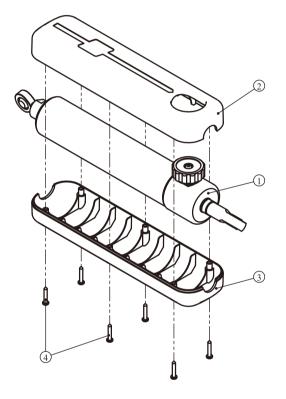

ItemNo.	Grade No.	Part No.	Description	QTY
1	9.1	ST56-390S	Hydro-Cylinder	1
2	9.2	RL81013500	Hydro-Cylinder Cover A	1
3	9.3	RL81013600	Hydro-Cylinder Cover B	1
4	9.4	GB845ST4.2*25DS	Cross Recessed Screw ST4.2*25	6

Measurement Guide

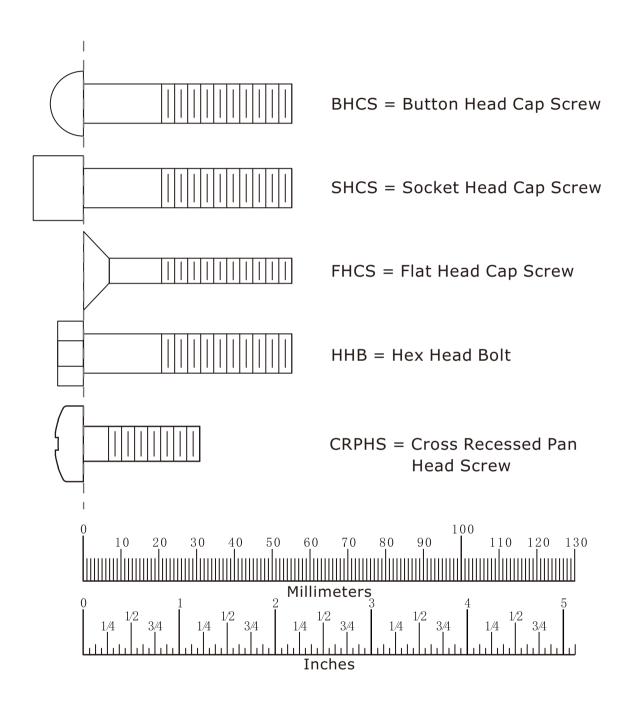

Diameter of bolt (mm/inch) M6(1/4")		M8(5/16")	M10(3/8")	M12(1/2")	M16(5/8")
Tightening torque (N.m)	9~12	22~30	45~59	78~104	193~257
Operational methods for adult men		The strength of the wrist and forearm	The strength of the entire arm	The strength of the arm and upper body	with all strength

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.



As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

STEP 1

- 1. Attach one Decorative Sleeve (#7) to the Seat Frame ASSY (#2).
- 2. Attach the Cup Holder (#8) to the Seat Frame ASSY (#2) using: four ST4.2*16 Screw (#16)

Note: Wrench Tighten Bolts.

STEP 2

(1


Attach the Seat Frame ASSY (#2) to the Upright Frame ASSY (#1) using:

four M10*30 SHCS (#21)

four Φ 10 Spring Washer (#18)



_

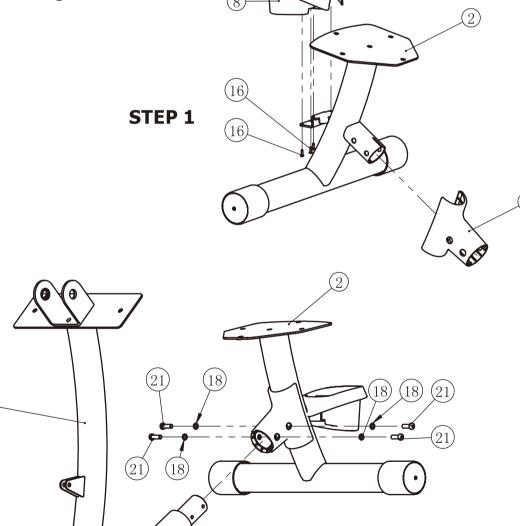

 $\widehat{7}$

STEP 3

Attach one Shaft $\Phi 25*110$ (#6), the Swing Frame ASSY (#3), one Adjustable Ring $\Phi 30*2*3$ (#13) and one Locking Ring $\Phi 45*\Phi 26*R32.5$ (#12) to Upright Frame ASSY (#1) using: two $\Phi 72*11.6$ Aluminium Cap (#15) two M10*30 FHCS (#23)

Note: 1. Make sure the position of the parts are correct.

2. Wrench Tighten Bolts.


STEP 4

Attach one Shaft Φ 25.4*77 (#5) and the Handle Frame ASSY (#4) to the Swing Frame ASSY (#3) using:

two Φ38*Φ10.5 Aluminium Cap (#14) two FHCS (#23)

one M10*20 SHCS (#22)

Note: Wrench Tighten Bolts.

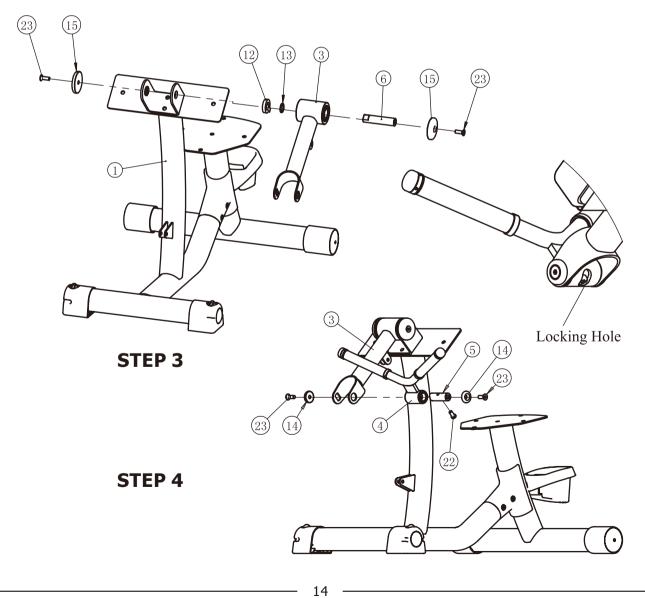


STEP 5

Attach the Hydro-Cylinder ASSY (#9) to the Upright Frame ASSY (#1) and the Swing Frame ASSY (#3) using: two M10*40 BHCS (#20) four Φ 11* Φ 20*2 Flat Washer (#19) two M10 Nylon Lock Nut (#17)

Note:


- 1. Wrench Tighten Bolts and Nylon Lock Nuts.
- 2. The Adjustment Knob of the Hydro-Cylinder on the right side of the machine.
- 3. Before using the machine, please make sure the Adjustment Knob upwards and tighten the HEX Nut.

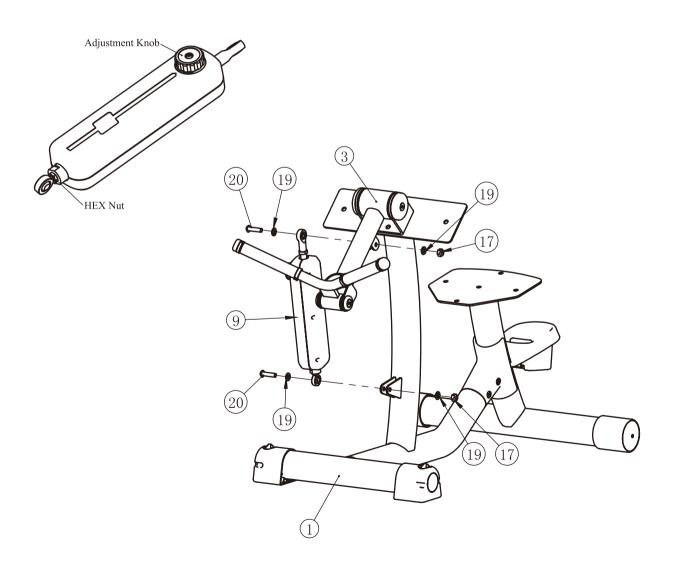

STEP 6

- Attach the Arm Pad (#10) to the Upright Frame ASSY (#1) using: two M10*30 SHCS (#21) two Φ11*Φ20*2 Flat Washer (#19)
- Attach the Seat Pad (#11) to the Seat Frame ASSY (#2) using: four M10*30 SHCS (#21) four Φ11*Φ20*2 Flat Washer (#19)


Note: Wrench Tighten Bolts.

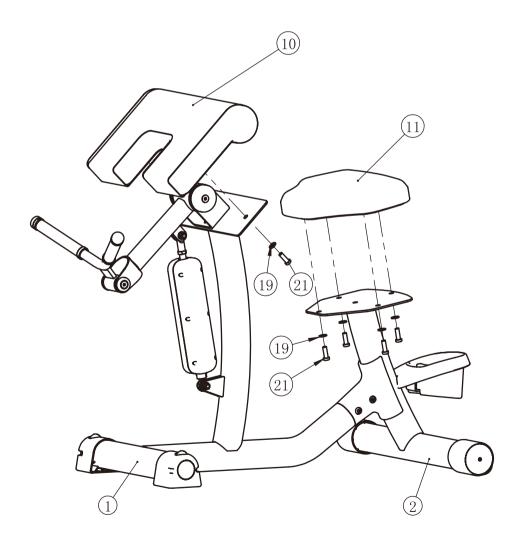

Adjust Instructions

Instructions

- 1. Select an appropriate Lever by Adjusting the Adjustment Knob.
- 2. Make sure the Adjustment Knob upwards.
- 3. The moving wheels are of benefit when you adjust the machine's position.

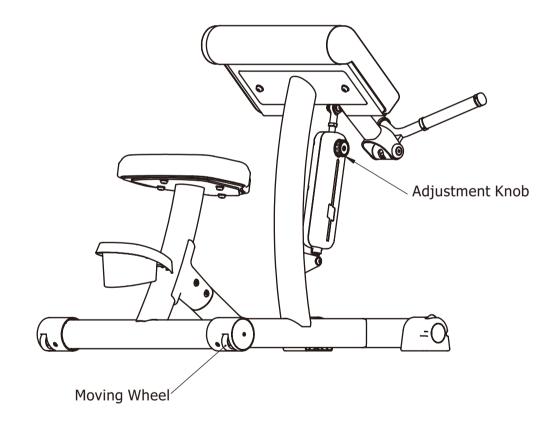

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	L	ATEST	DATE	ENTR	ſ	
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or warn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We uses only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

