

IF9329 MULTI PRESS OWNER'S MANUAL

Table Of Contents

CAUTION!

Read all precautions and instructions in this manual before using this equipment.

Important Safety Instructions	3
Instructions	5
Exploded View and Parts List	6
Measurement Guide	- 18
Assembly Instructions	19
Assembly	20
Adjust Instructions and Exercise Instructions	- 33
Maintenance Schedule	· 34
General Maintenance Information	- 35
Weight Training Tips	36

Please assemble according to the actual **Weights and Shroud** you buy!

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- Read all instructions before using the equipment.
 These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.6 meters space around the product.

 Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.

 Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged. Never drop or insert anything into any opening in the equipment. Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition. Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

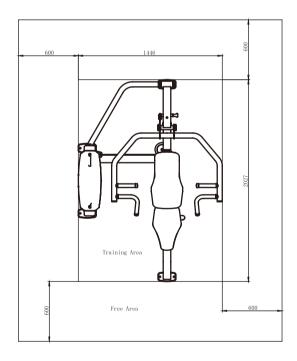

Specifications

Class: S

Maximum Wt. Capacity: 134kg/ 295lbs
Maximum User Weight: 150kg/ 330lbs
Product Dimension: 2027*1446*1530mm
Product Total Surface: 2027*1446mm


Product Total Mass:

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

Tools Required

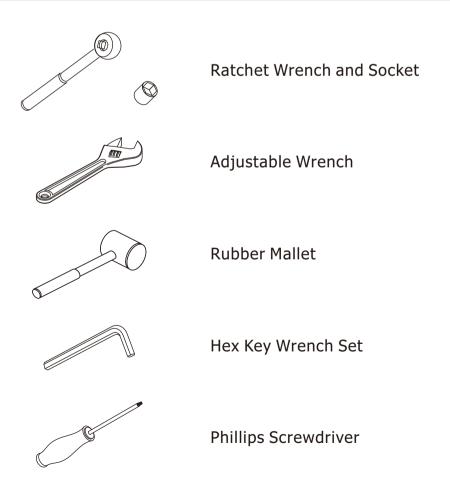


Overall

Item No.	Part No.	Description	QTY
1	IF9301B01ASSY	Weight Stack Frame ASSY	1
2	IF93012100	Top Bracket	2
3	IF930122ASSY	Bottom Bracket ASSY	1
4	IF93013100	Training Placard Cover	1
5	IF93013200	Top Cover	1
6	IF93013300	Right Plug	1
7	IF93013400	Left Plug	1
8	IT95014200	Top Plate	1
9	IT95015500	Top Rear Shroud	1
10	IT95014400	Guide Rod Φ19*1242	2
11	IF932902ASSY	Main Frame ASSY	1
12	IF932903ASSY	Load Arm Frame ASSY	1
13	IF932904ASSY	Arm Frame ASSY	1
14	IF932905ASSY	Front Support Frame ASSY	1
15	IF932906ASSY	Seat Pad Frame ASSY	1
16	IF932907ASSY	Back Pad Frame ASSY	1
17	IF932908ASSY	Support Frame ASSY	1
18	IF93290900	Bottom Cross Frame	1
19	IF93120400	Rear Connection Frame	1
20	IF93295600	Cable ASSY	1
21	IF93012600	AxisΦ25*133*M10	1
22	SL70462200	AxisΦ25.4*145.5*M10	2
23	SG500110400V5	4.5" Pulley(Spacer)	7
24	IT95016400	Pulley Cover	5
25	IT80033800B	Half Pulley Cover	4
26	IT90012000V1	Selector Pin W/Coil	1
27	IT95016100	Guide Rod Fixing Sleeve Φ25*Φ19*45	2
28	HFOPT900-04A0602	SpringΦ15.5Φ1.5*36	2
29	IT80023000	Weight Rubber Bumper	2
30	IF93062200	WasherΦ62*Φ10.5*3	4
31	FE97211900	СарФ60	4
32	FE97212000	Circle RingΦ62.5*5	4
33	IN-D21202000	СарФ38*Ф10.5*8	2
34	FS544600	BumperΦ20*Φ10*16	2
35	CNLM10*30*30DS20NL	Flat Head Cap Screw M10*30	2


Overall

Item No.	Part No.	Description	QTY
36	GB70M10*25DS20NL	Socket Head Cap Screw M10*25	4
37	GB70M10*50DS20	Socket Head Cap Screw M10*50	5
38	GB5780M12*115DS20	Hex Head Bolt M12*115	2
39	GB5781M10*30DS20	Hex Head Bolt M10*30	4
40	GB5780M10*50DS20	Hex Head Bolt M10*50	2
41	GB5780M10*60DS20	Hex Head Bolt M10*60	2
42	GB5780M10*75DS20	Hex Head Bolt M10*75	5
43	GB5780M10*100DS20	Hex Head Bolt M10*100	4
44	GB5780M10*105DS20	Hex Head Bolt M10*105	2
45	GB5780M10*125DS20	Hex Head Bolt M10*125	1
46	GB9512DS2	Flat WasherФ13*Ф24*2.5	4
47	GB9510DS20	Flat WasherФ11Ф20*2	35
48	GB9310DS12	Spring WasherΦ10	2
49	NM12DS2	Nylon Lock Nut M12	2
50	NM10DS2	Nylon Lock Nut M10	19
51	GB818M6*10N19	Cross Recessed Pan Head Screw M6*10	4
52	GB818M6*20*20N19	Cross Recessed Pan Head Screw M6*20	18
53	SL70461700V1	Seat Pad	1
54	IF93015100	Back Pad	1
55	IT95015600	Rear Shroud	1
56	IF9301B21ASSY	Front Bracket ASSY	1
57	IF93SH0102ASSY	Right Bracket ASSY	1
58	IF93SH0103ASSY	Left Bracket ASSY	1
59	IF93SH010400	Notched Front Shroud	1
60	IT95015300	Front Shroud	1
61	ECU7P3500	Plastic Nut	8
62	GB9074ST4.2*16DHS	Cross Disc Self Tapping Screw ST4.2*16	12
65	IT9501C3100	Half Rear Shroud	1
66	NBS6DHS	Hex Key S=6	1
67	NBS8DHS	Hex Key S=8	1
68	LW200BS	Wrench Φ6*117	1
69	YHY	Lube	1

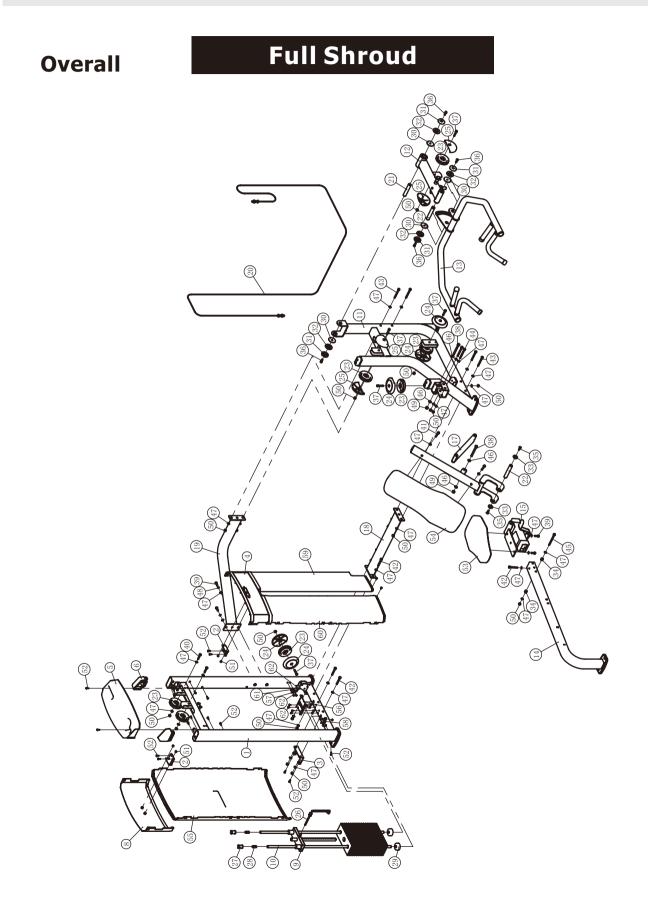


Half Rear Shroud Overall

Weight Stack Frame ASSY

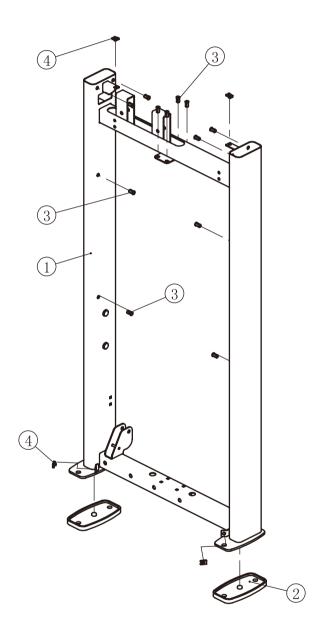


Item No.	Grade No.	Part No.	Description	QTY
1	1.1	IF9301B0100	Weight Stack Frame	1
2	1.2	BS81223100	Foot Plate	2
3	1.3	AC32705800	U-Nut M6	4
4	1.4	GB17880.5M6*16.5DS17	Rivet Nut M6	14


Bottom Bracket ASSY

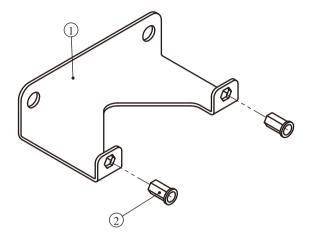


Front Bracket ASSY

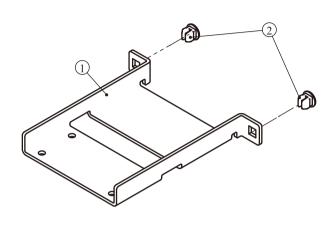

Right Bracket ASSY

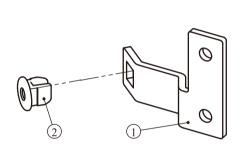

Left Bracket ASSY

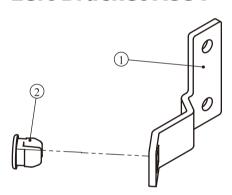


Item No.	Grade No.	Part No.	Description	QTY
1	3.1	IF93012200	Bottom Bracket	1
2	3.2	GB17880.5M6*16.5DS17	Rivet Nut M6	2

Item No.	Grade No.	Part No.	Description	QTY
1	56.1	IF9301B2100	Front Bracket	1
2	56.2	ECU7P3500	Plastic Nut	2

Item No.	Grade No.	Part No.	Description	QTY
1	57.1	FB013600	Right Bracket	1
2	57.2	ECU7P3500	Plastic Nut	1

Item No.	Grade No.	Part No.	Description	QTY
1	58.1	FB013500	Left Bracket	1
2	58.2	ECU7P3500	Plastic Nut	1


Main Frame ASSY

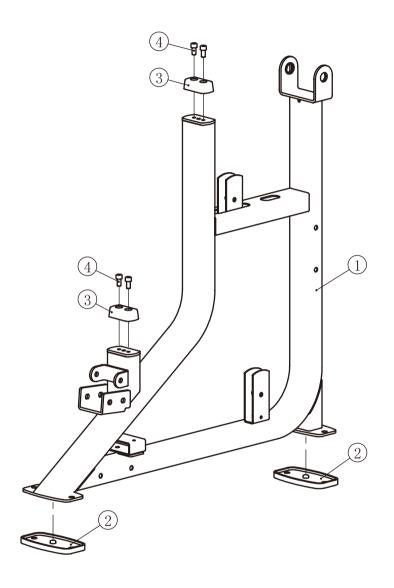

Item No.	Grade No.	Part No.	Description	QTY
1	11.1	IF93290200	Main Frame	1
2	11.2	BS81223100	Foot Plate	2
3	11.3	RS17000400	Urethane Bumper	2
4	11.4	GB70M10*20DS20	Socket Head Cap Screw M10*20	4

Load Arm Frame ASSY


Cable Connector ASSY

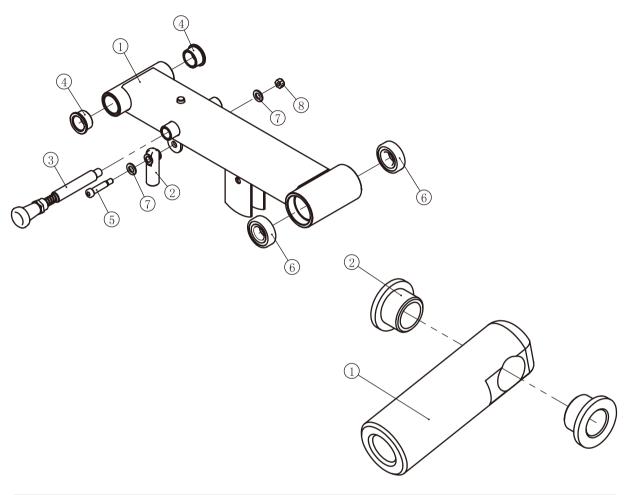

Item No.	Grade No.	Part No.	Description	QTY
1	12.1	IF93290300	Load Arm Frame	1
2	12.2	IF930127ASSY	Cable Connector ASSY	1
3	12.3	IT95091700	Position Adjustment Pin	1
4	12.4	M02502000	BushingΦ38*Φ25.4*18	2
5	12.5	IF81105500V1	Fixed BoltΦ9.4*47.5*M8	1
6	12.6	GB2766205-2ZC3	Deep Groove Ball Bearing Φ25*Φ52*15	2
7	12.7	GB9510DS20	Flat WasherΦ11Φ20*2	2
8	12.8	NM8DS2	Nylon Lock Nut M8	1


Item No.	Grade No.	Part No.	Description	QTY
1	12.2.1	IF93012700	Cable Connector	1
2	12.2.2	BNH0738	BushingФ18*Ф12.7*Ф9.5*9.5	2

Arm Frame ASSY

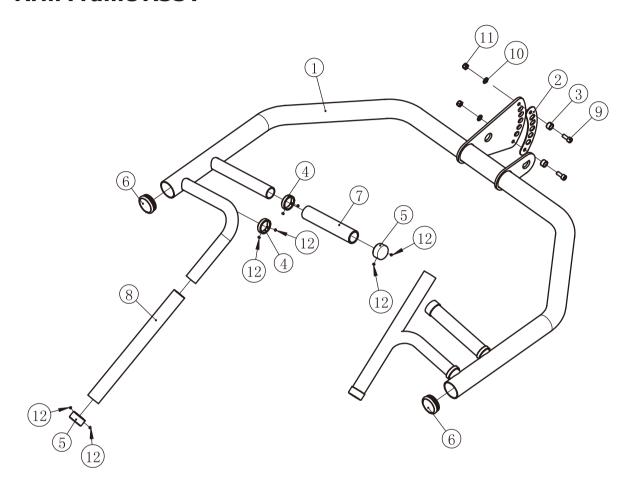

Item No.	Grade No.	Part No.	Description	QTY
1	13.1	IF93290400	Arm Frame	1
2	13.2	IF93292100	Lining Board	1
3	13.3	IN-S10111200	Rubber SleeveΦ17*10.5	2
4	13.4	V38900	Aluminum Grip Ring	4
5	13.5	V39000	Aluminum Grip Cap	4
6	13.6	B10009900	End CapΦ50.8	2
7	13.7	026-01PL0235-31	Grip STΦ36*Φ29*177.8	2
8	13.8	026-01PL0235-33	Grip STΦ36*Φ29*360	2
9	13.9	GB70M8*20DS20	Socket Head Cap Screw M8*20	2
10	13.10	GB958DS20	Flat WasherΦ9*Φ16*1.6	2
11	13.11	NM8DS2	Nylon Lock Nut M8	2
12	13.12	YZGB7710-32*3.2N19	Socket Set Screw 10-32UNF*3.2	16


Seat Pad Frame ASSY

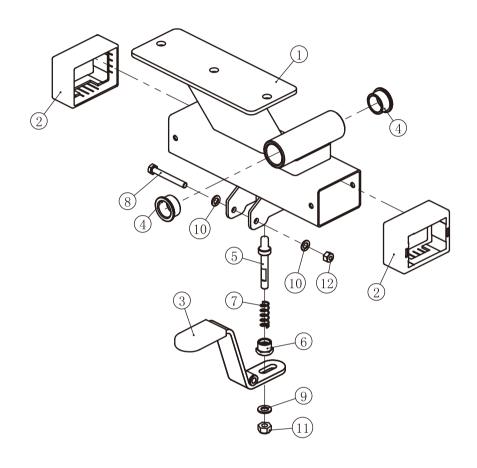

Item No.	Grade No.	Part No.	Description	QTY
1	15.1	IF93290600	Seat Pad Frame	1
2	15.2	HF9700800B	Plastic Sleeve □ 63.5*88.9/ □ 50.8*76.2	2
3	15.3	ES30007600ASSY	Adjustable Handle Frame ASSY	1
4	15.4	M02502000	BushingΦ38*Φ25.4*18	2
5	15.5	ES30007700	Pin Pole	1
6	15.6	KPS18002701V1	Nut M20*18	1
7	15.7	CF217903100	Spring	1
8	15.8	GB5780M8*65DS20	Hex Head Bolt M8*65	1
9	15.9	GB9510DS20	Flat WasherΦ11Φ20*2	1
10	15.10	GB958DS20	Flat WasherΦ9*Φ16*1.6	2
11	15.11	NM10DS2	Nylon Lock Nut M10	1
12	15.12	NM8DS2	Nylon Lock Nut M8	1

Front Support Frame ASSY

Adjustable Handle Frame ASSY

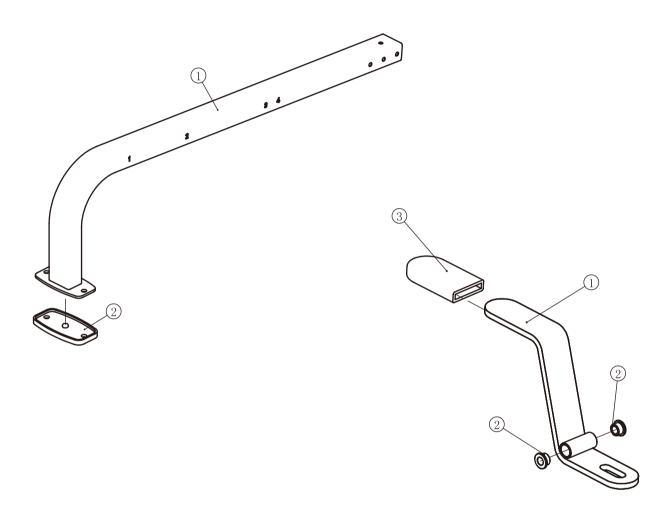


Item No.	Grade No.	Part No.	Description	QTY
1	14.1	IF93290500	Front Support Frame	1
2	14.2	BS81223100	Foot Plate	1

Item No.	Grade No.	Part No.	Description	QTY
1	15.3.1	ES30007600	Adjustable Handle Frame	1
2	15.3.2	P60015700	BushingΦ16*Φ8*8	2
3	15.3.3	ES30007603	Adjustable Handle Grip	1

Back Pad Frame ASSY


Support Frame ASSY

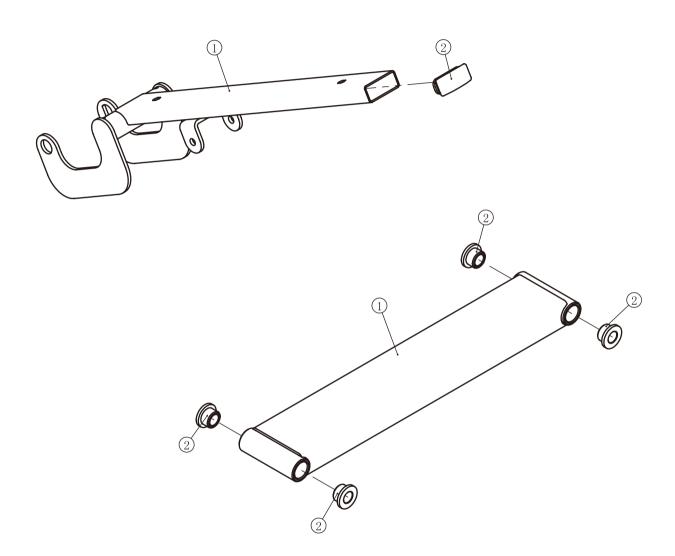

Item No.	Grade No.	Part No.	Description	QTY
1	16.1	IF93290700	Seat Pad Support	1
2	16.2	IN-D10134200	Plug □30*70	1

Item No.	Grade No.	Part No.	Description	QTY
1	17.1	IF93290800	Support Frame	1
2	17.2	M01402000	BushingΦ25*Φ12.2*13	4

Measurement Guide

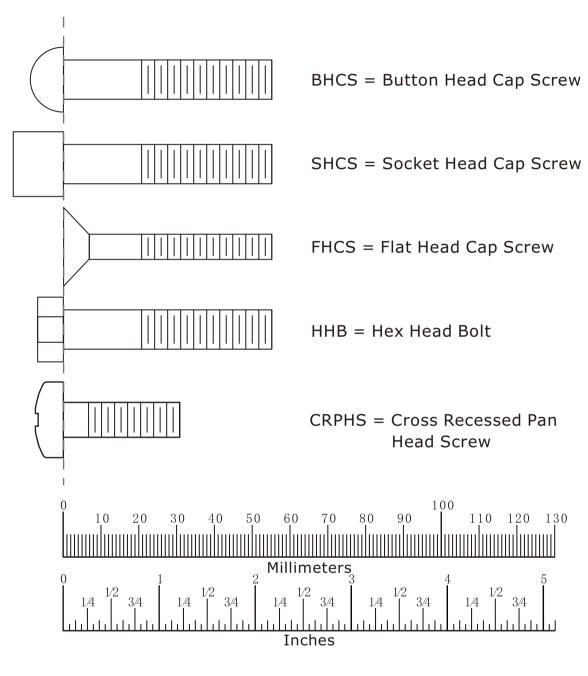

Diameter of bolt (mm/inch)	M6(1/4")	M8(5/16")	M10(3/8")	M12(1/2")	M16(5/8")
Tightening torque (N.m)	9~12	22~30	45~59	78~104	193~257
Operational methods for adult men	The strength of the wrist	The strength of the wrist and forearm	I the strenath of	The strength of the arm and upper body	with all strength

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

№ NOTE

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

STEP 1

Attach the Bottom Cross Frame (#18) and the Rear Connection Frame (#19) to the Weight Stack Frame ASSY (#1) and the Main Frame ASSY (#11) using:

two M10*30 HHB (#39)

two M10*75 HHB (#42)


four M10*100 HHB (#43)

two Φ10 Spring Washer (#48)

fourteen Φ11*Φ20*2 Flat Washer (#47)

six M10 Nylon Lock Nut (#50)

Note: Wrench Tighten Bolts and Nylon Lock Nuts.

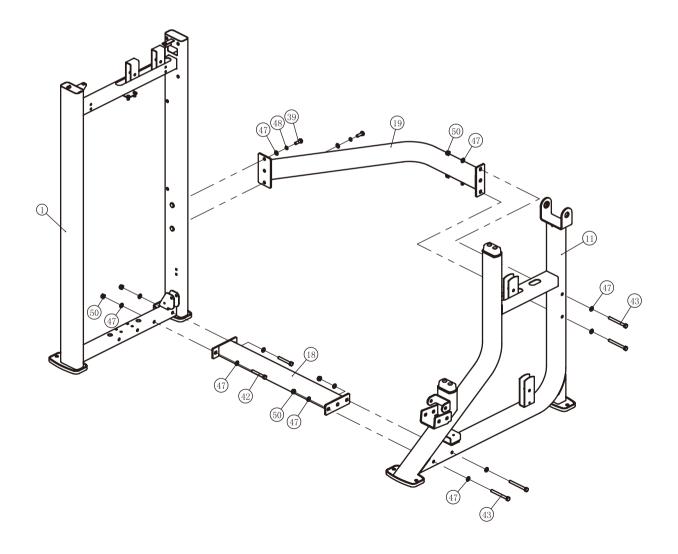


STEP 2

- 1. Attach the Seat Pad Frame ASSY (#15) to the Front Support Frame ASSY (#14).
- 2. Attach two Bumper Φ 20* Φ 10*16 (#34) to the Front Support Frame ASSY (#14) using: one M10*125 HHB (#45) two Φ 11* Φ 20*2 Flat Washer (#47) one M10 Nylon Lock Nut (#50)
- 3. Attach the Front Support Frame ASSY (#14) and the Seat Pad Frame ASSY (#15) to the Main Frame ASSY (#11) using:

one M10*75 HHB (#42) two M10*105 HHB (#44) six Φ11*Φ20*2 Flat Washer (#47) three M10 Nylon Lock Nut (#50)

- 4. Attach the Back Pad Frame ASSY (#16) to the Seat Pad Frame ASSY (#15) using: one Axis Φ 25.4*145.5*M10 (#22) two Cap Φ 38* Φ 10.5*8 (#33) two M10*30 FHCS (#35)
- 5. Attach the Support Frame ASSY (#17) to the Main Frame ASSY (#11) and the Back Pad Frame ASSY (#16) using:
 two M12*115 HHB (#38) four Φ13*Φ24*2.5 Flat Washer (#46)

two M12 Nylon Lock Nut (#49)

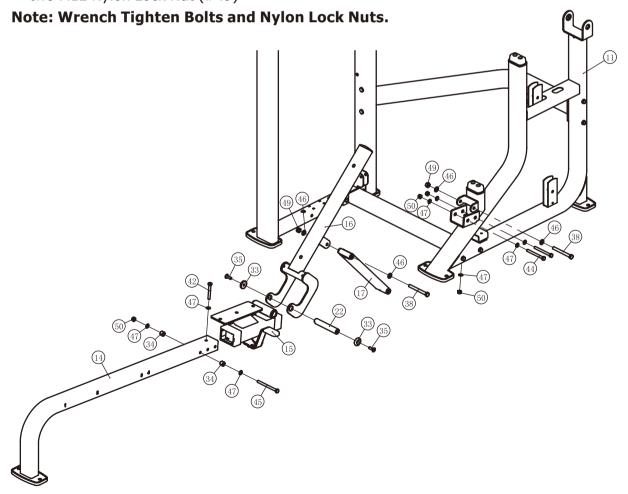

STEP 3

1. Attach the Load Arm Frame ASSY (#12) to the Main Frame ASSY (#11) using:

one Axis Φ25*133*M10 (#21)

two Φ60 Cap (#31)

two Washer Φ62*Φ10.5*3 (#30)

two M10*25 SHCS (#36)

two Φ62.5*5 Circle Ring (#32)

2. Attach the Arm Frame ASSY (#13) to the Load Arm Frame ASSY (#12) using:


one Axis Φ25.4*145.5*M10 (#22)

two Φ60 Cap (#31)

two Washer Φ62*Φ10.5*3 (#30)

two M10*25 SHCS (#36)

two Φ62.5*5 Circle Ring (#32)

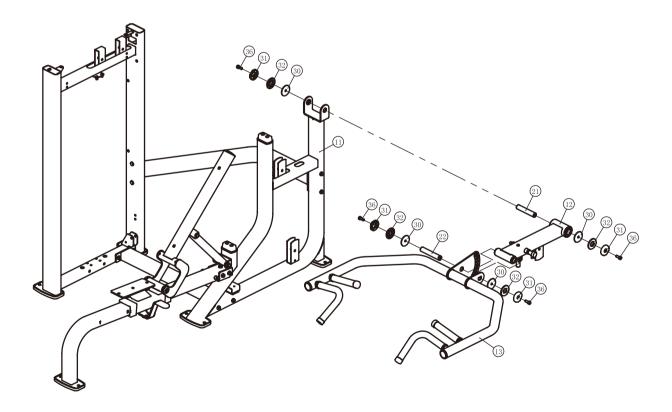

STEP 4

TIPS: Firstly, attach one end of the Cable ASSY (#20) to the Load Arm Frame ASSY (#12). Before attach the 4.5" Pulley (Spacer) to the frame, you should lead the other end of the Cable ASSY (#20) across it.

1. Attach one 4.5" Pulley (Spacer) (#23) and two Half Pulley Cover (#25) to the Load Arm Frame ASSY (#12) using:

one M10*50 SHCS (#37)

one M10 Nylon Lock Nut (#50)

2. Attach one 4.5" Pulley (Spacer) (#23) and two Half Pulley Cover (#25) to the Main Frame ASSY (#11) using:

one M10*50 SHCS (#37)

one M10 Nylon Lock Nut (#50)

3. Attach two 4.5" Pulley (Spacer) (#23) and three Pulley Cover (#24) to the Main Frame ASSY (#11) using:

two M10*50 SHCS (#37)

one Φ11*Φ20*2 Flat Washer (#47)

two M10 Nylon Lock Nut (#50)

4. Attach three 4.5" Pulley (Spacer) (#23) and two Pulley Cover (#24) to the Weight Stack Frame ASSY (#1) using:


two M10*50 HHB (#40)

one M10*50 SHCS (#37)

four Φ11*Φ20*2 Flat Washer (#47)

three M10 Nylon Lock Nut (#50)

Note: Wrench Tighten Bolts and Nylon Lock Nuts.

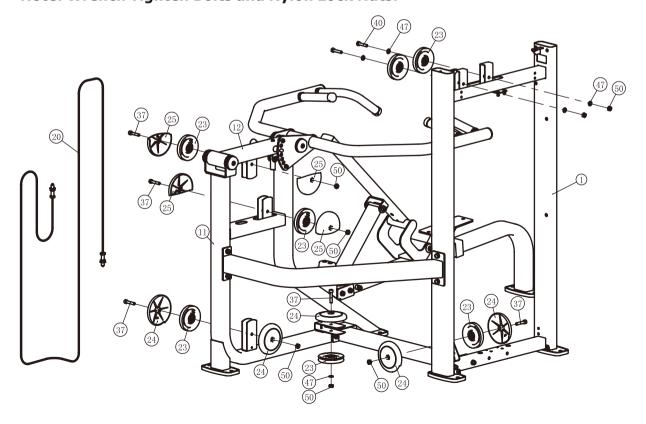


Full Shroud


Select STEP

- 1. Attach one Front Bracket ASSY to the Weight Stack Frame ASSY, using:
 - four Plastic Nut
 - four ST4.2*16 Cross Disc Self Tapping Screw
- 2. Attach one Right Bracket ASSY and one Left Bracket ASSY to the Weight Stack Frame ASSY using:

four Plastic Nut

four ST4.2*16 Cross Disc Self Tapping Screw

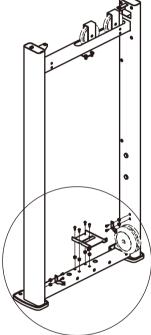

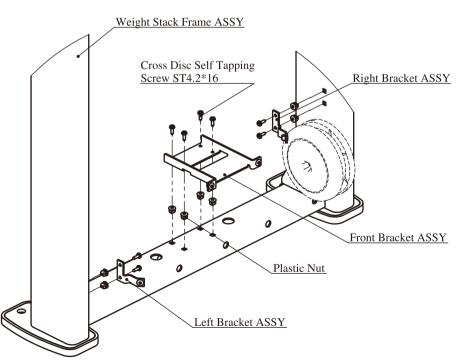

STEP 5

Here is the assembly instruction for 160LBS Weights!


1. Attach:

two Guide Rod Φ 19*1242 (#10) two Weight Rubber Bumper (#29) fifteen Weight Plate 10LBS (#101) two weight stack space (#103) one Top Plate (#9)

to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ25*Φ19*45 (#27) two Spring (#28)

- 2. Attach the Selector Pin W/Coil (#26) to the Top Plate (#9).
- 3. Attach the Cable ASSY (#20) to the Top Plate (#9).

Grade No.	Part No.	Description	QTY
101	FE97193100	10LBS Weight Plate	15
103	FEWS01ASSY	Weight Stack Space	2

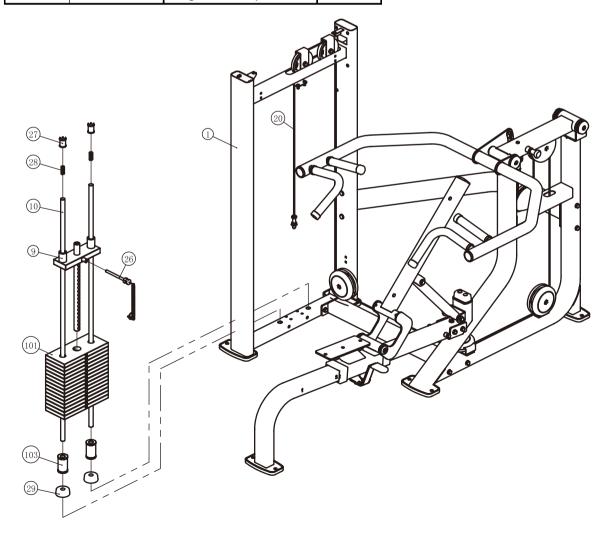

STEP 5


Here is the assembly instruction for 200LBS Weights!

1. Attach:

two Guide Rod Φ 19*1242 (#10) two Weight Rubber Bumper (#29) nineteen Weight Plate 10LBS (#101) one Top Plate (#9) to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ 25* Φ 19*45 (#27) two Spring (#28)

- 2. Attach the Selector Pin W/Coil (#26) to the Top Plate (#9).
- 3. Attach the Cable ASSY (#20) to the Top Plate (#9).

Grade No. Part No. Descri		Description	QTY
101	FE97193100	10LBS Weight Plate	19

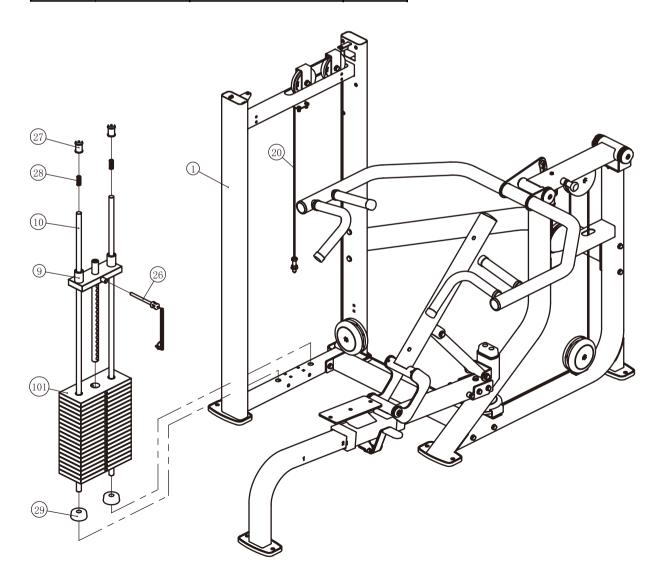

STEP 5

Here is the assembly instruction for 235LBS Weights!

1. Attach:


two Guide Rod Φ 19*1242 (#10) two Weight Rubber Bumper (#29) fifteen Weight Plate 15LBS (#102) two weight stack space (#103)

one Top Plate (#9)

to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve $\Phi25*\Phi19*45$ (#27) two Spring (#28)

- 2. Attach the Selector Pin W/Coil (#26) to the Top Plate (#9).
- 3. Attach the Cable ASSY (#20) to the Top Plate (#9).

Grade No.	Part No.	Description	QTY
102	FE97193200	15LBS Weight Plate	15
103	FEWS01ASSY	Weight Stack Space	2

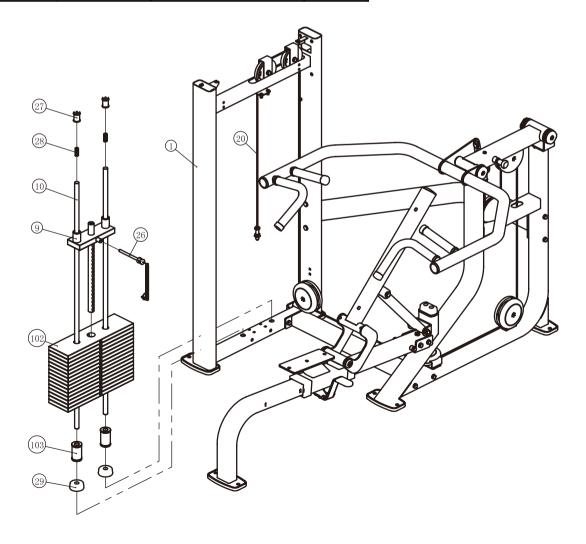

STEP 5

Here is the assembly instruction for 295LBS Weights!

1. Attach:


two Guide Rod Φ 19*1242 (#10) two Weight Rubber Bumper (#29) nineteen Weight Plate 15LBS (#102) one Top Plate (#9)

to the Weight Stack Frame ASSY (#1) using:


two Guide Rod Fixing Sleeve $\Phi25*\Phi19*45$ (#27) two Spring (#28)


- 2. Attach the Selector Pin W/Coil (#26) to the Top Plate (#9).
- 3. Attach the Cable ASSY (#20) to the Top Plate (#9).


Grade No.	Grade No. Part No. Description		QTY
102	FE97193200	15LBS Weight Plate	19

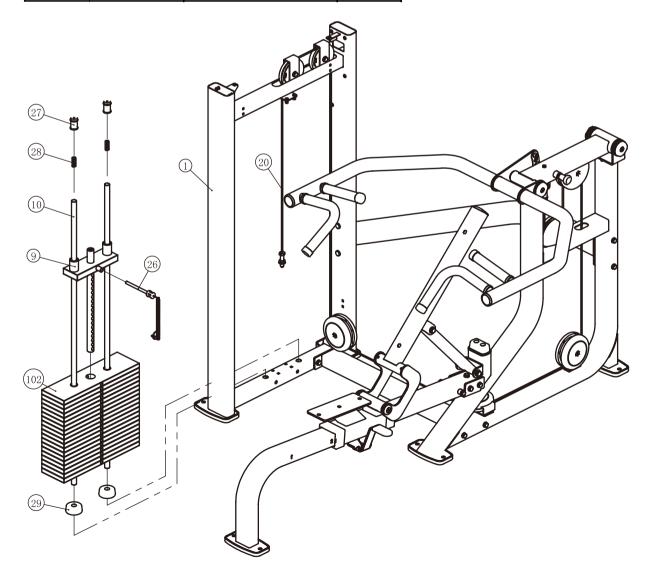

All weight plate sticker paste schematic diagram

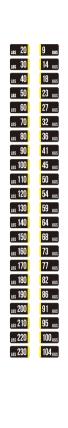


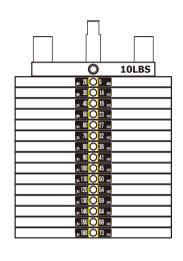


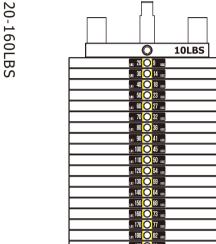

20-200LBS



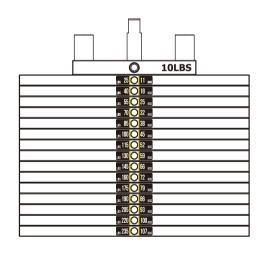


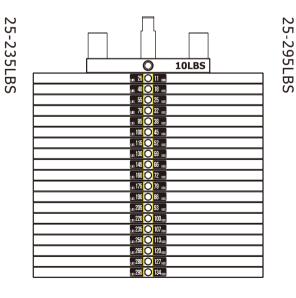

STEP 6

Full Shroud


- 1. Attach the Bottom Bracket ASSY (#3) to the Weight Stack Frame ASSY (#1) using: two M10*75 HHB (#42) four Φ11*Φ20*2 Flat Washer (#47) two M10 Nylon Lock Nut (#50)
- 2. Attach two Top Bracket (#2) to the Training Placard Cover (#4) and the Top Rear Shroud (#8) using: four M6*10 CRPHS (#51)
- 3. Attach the Rear Shroud (#55) to the Weight Stack Frame ASSY (#1) and the Bottom Bracket ASSY (#3) using: six M6*20 CRPHS (#52)
- 4. Attach the Training Placard Cover (#4) and the Top Rear Shroud (#8) to the Weight Stack Frame ASSY (#1) using: ten M6*20 CRPHS (#52)
- 5. Attach the Right Plug (#6) and the Left Plug (#7) to the Weight Stack Frame ASSY (#1).
- 6. Attach the Top Cover (#5) to the Weight Stack Frame ASSY (#1) using: two M6*20 CRPHS (#52)

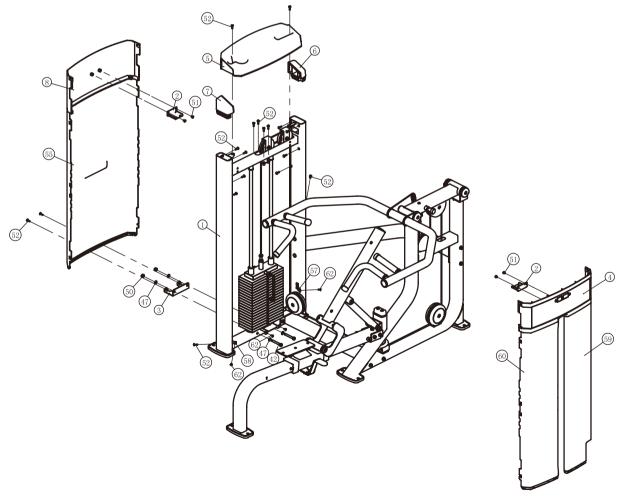

STEP 6


Half Rear Shroud

- 1. Attach the Bottom Bracket ASSY (#3) to the Weight Stack Frame ASSY (#1) using: two M10*75 HHB (#42) four Φ 11* Φ 20*2 Flat Washer (#47) two M10 Nylon Lock Nut (#50)
- 2. Attach two Top Bracket (#2) to the Training Placard Cover (#4) and the Top Rear Shroud (#8) using: four M6*10 CRPHS (#51)
- 3. Attach the Half Rear Shroud (#65) to the Weight Stack Frame ASSY (#1) and the Bottom Bracket ASSY (#3) using: six M6*20 CRPHS (#52)
- 4. Attach the Training Placard Cover (#4) and the Top Rear Shroud (#8) to the Weight Stack Frame ASSY (#1) using: ten M6*20 CRPHS (#52)
- 5. Attach the Right Plug (#6) and the Left Plug (#7) to the Weight Stack Frame ASSY (#1).
- 6. Attach the Top Cover (#5) to the Weight Stack Frame ASSY (#1) using: two M6*20 CRPHS (#52)

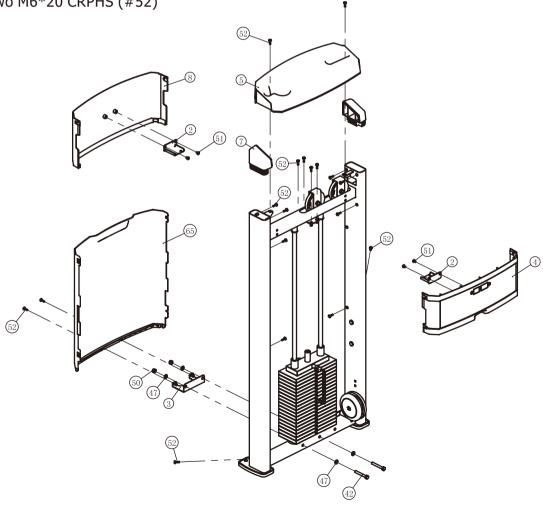

STEP 7

- 1. Attach the Seat Pad (#53) to the Seat Pad Frame ASSY (#15) using: two M10*30 HHB (#39) two Φ 11* Φ 20*2 Flat Washer (#47)
- 2. Attach the Back Pad (#54) to the Back Pad Frame ASSY (#16) using: two M10*60 HHB (#41) two Φ 11* Φ 20*2 Flat Washer (#47)

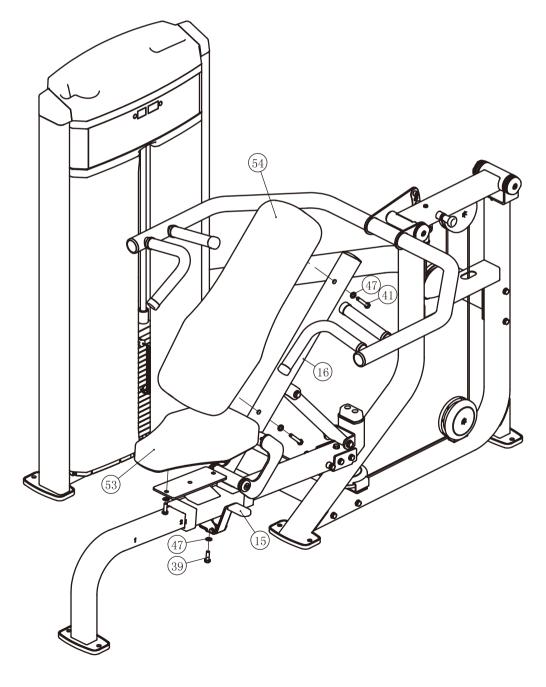

Adjust Instructions and Exercise Instructions

The Ues Position Adjustment


- 1. Pull the Adjustable Support and Adjust the Seat Pad and the Back Pad to the desired position.
- 2. Make sure the pin gets into the hole completely.

The use Position adjustment


- 1. Pull the pin and adjust the Arm Frame ASSY to the desired position.
- 2. Make sure the pin gets into the hole completely.

The Ues of Selector Pin W/Coil

- 1. Select an appropriate weight and put the Selector pin W/Coil into the hole on it.
- 2. Make sure the Selector Pin W/Coil gets into hole completely.

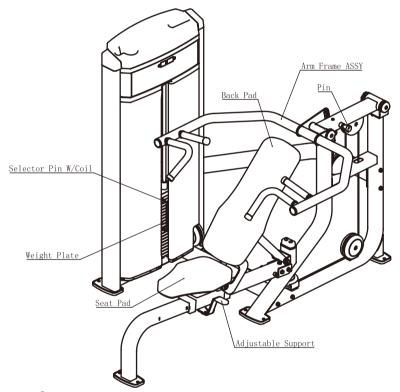

Exercise Instructions

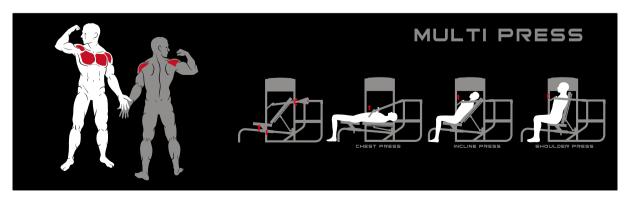

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	l	_ATES1	DATE	ENTR	′	
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or warn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We uses only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







